



AVIGILON[™]ALTA

Unity H6SL Bullet Camera Installation Guide

Contents

H6SL Bullet Cameras Installation Guide 3

H6SL Bullet Cameras Installation Guide

The H6SL Bullet Cameras Installation Guide provides instructions for installing H6SL Bullet camera. This Installation Guide also covers how to connect external devices and how to add cameras to the network.



Camera Models:

2.0C-H6SL-BO1-IR	3.0C-H6SL-BO1-IR	3.0C-H6SL-BO2-IR
5.0C-H6SL-BO1-IR	5.0C-H5SL-BO1-IR	8.0C-H6SL-BO1-IR

Safety and Regulatory Information

H6SL Bullet Cameras Overview

Preparing H6SL Bullet Cameras for Installation

Installing H6SL Bullet Cameras

Connecting Cables to H6SL Bullet Cameras

Adding Cameras to the Network

Adjusting H6SL Bullet Cameras

H6SL Bullet Camera Maintenance

Resources for Avigilon Cameras

More Information & Support

For additional product documentation and software and firmware upgrades, visit support.avigilon.com.

Contact Avigilon Technical Support at support.avigilon.com/s/contactsupport.

©2026, Avigilon Corporation. All rights reserved. MOTOROLA, MOTO, MOTOROLA SOLUTIONS, and the Stylized M Logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC and are used under license. All other trademarks are the property of their respective owners. Unless stated explicitly and in writing, no license is granted with respect to any copyright, industrial design, trademark, patent or other intellectual property rights of Avigilon Corporation or its licensors.

Avigilon Corporation
avigilon.com

PDF generated on 05 25, 2026

See the Motorola Solutions terms of use at motorolasolutions.com/en_us/about/terms-use.html



MOTOROLA SOLUTIONS