



AVIGILON[™] ALTA

Unity H6SL Dome Camera Installation Guide

Contents

H6SL Dome Cameras Installation Guide 3

H6SL Dome Cameras Installation Guide

The H6SL Dome Cameras Installation Guide provides installation instructions for four different camera mounting scenarios: surface, in-ceiling, pendant and wedge mount. This Installation Guide also covers how to connect external devices and how to add cameras to the network.



Camera Models:

2.0C-H6SL-D1	2.0C-H6SL-D1-IR	2.0C-H6SL-DO1-IR
3.0C-H6SL-D1	3.0C-H6SL-D1-IR	3.0C-H6SL-DO1-IR
5.0C-H6SL-D1	5.0C-H6SL-D1-IR	5.0C-H6SL-DO1-IR
		8.0C-H6SL-DO1-IR

Safety and Regulatory Information

[H6SL Dome Cameras Overview](#)

[Preparing H6SL Dome Cameras for Installation](#)

[Installing H6SL Dome Cameras](#)

[Connecting Cables to H6SL Dome Cameras](#)

[Adding Cameras to the Network](#)

[Adjusting H6SL Dome Cameras](#)

[H6SL Dome Camera Maintenance](#)

[Resources for Avigilon Cameras](#)

More Information & Support

For additional product documentation and software and firmware upgrades, visit support.avigilon.com.

Contact Avigilon Technical Support at support.avigilon.com/s/contactsupport.

©2026, Avigilon Corporation. All rights reserved. MOTOROLA, MOTO, MOTOROLA SOLUTIONS, and the Stylized M Logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC and are used under license. All other trademarks are the property of their respective owners. Unless stated explicitly and in writing, no license is granted with respect to any copyright, industrial design, trademark, patent or other intellectual property rights of Avigilon Corporation or its licensors.

Avigilon Corporation
avigilon.com

PDF generated on 04 24, 2026

See the Motorola Solutions terms of use at motorolasolutions.com/en_us/about/terms-use.html



MOTOROLA SOLUTIONS