



AVIGILON™ UNITY

Unity H6A Dualhead Camera Installation Guide

Contents

H6A Dual Head Cameras Installation Guide 3

H6A Dual Head Cameras Installation Guide

The H6A Dual Head Cameras Installation Guide provides installation instructions for different mounting scenarios: surface, junction box, and pendant mount. This Installation Guide also covers how to connect to external devices and how to add cameras to the network.



Camera Models:

6.0C-H6ADH-DO1-IR	10.0C-H6ADH-DO1-IR	16.0C-H6ADH-DO1-IR
-------------------	--------------------	--------------------

[Safety and Regulatory Information](#)

[H6A Dual Head Cameras Overview](#)

[Preparing H6A Dual Head Cameras for Installation](#)

[Installing H6A Dual Head Cameras](#)

[Connecting Cables to H6A Dual Head Cameras](#)

[Adding Cameras to the Network](#)

[Adjusting H6A Dual Head Cameras](#)

[H6A Dual Head Camera Maintenance](#)

[Resources for Avigilon Cameras](#)

More Information & Support

For additional product documentation and software and firmware upgrades, visit support.avigilon.com.

Contact Avigilon Technical Support at support.avigilon.com/s/contactsupport.

©2026, Avigilon Corporation. All rights reserved. MOTOROLA, MOTO, MOTOROLA SOLUTIONS, and the Stylized M Logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC and are used under license. All other trademarks are the property of their respective owners. Unless stated explicitly and in writing, no license is granted with respect to any copyright, industrial design, trademark, patent or other intellectual property rights of Avigilon Corporation or its licensors.

Avigilon Corporation
avigilon.com

PDF generated on 04 24, 2026

See the Motorola Solutions terms of use at motorolasolutions.com/en_us/about/terms-use.html

