



ELEV-ALLPIR5A Manual

MAIN MENU

AE	↓	AE	↓
AWB	↓	AWB	↓
DAY-NIGHT	↓	DAY-NIGHT	↓
SMART LED	↓	SMART LED	↓
IMAGE ENHANCE	↓	IMAGE ENHANCE	↓
VIDEO OUTPUT	↓	VIDEO OUTPUT	↓
LANGUAGE	◀ ENGLISH ▶	LANGUAGE	ENGLISH\繁体中文\繁體中文\русский\italiano\Português
RESET		RESET	
SAVE-EXIT		SAVE-EXIT	
EXIT		EXIT	

EXPOSURE

BRIGHTNESS	◀ 9 ▶	BRIGHTNESS	1-20
EXPOSURE MODE	◀ GLOBE ▶	EXPOSURE MODE	GLOBE\BLC
RETURN		RETURN	

WB

MODE	◀ ATW ▶	MODE	ATW\WWB
RETURN		RETURN	

DAY/NIGHT

MODE	◀ AUTO ▶	MODE	AUTO\COLOR\B\W\EXT
RETURN		RETURN	

IMAGE ENHANCE

CONTRAST	◀ 3 ▶	CONTRAST	1-16
SHARPNESS	◀ 8 ▶	SHARPNESS	1-16
COLOR GAIN	◀ 3 ▶	COLOR GAIN	1-16
DNR	◀ 7 ▶	DNR	1-16
MIRROR	◀ DEFAULT ▶	MIRROR	DEFAULT\H\I\H\V
D-WDR	◀ OFF ▶	D-WDR	OFF\ON
RETURN		RETURN	

VIDEO OUTPUT

HD	◀ AHD ▶	HD	AHD
VIDEO STANDARD	◀ 5MP20 ▶	VIDEO STANDARD	5MP12.5\5MP20\4MP15\4MP25\4MP30\1080P25\1080P30
RETURN		RETURN	

HD	◀ TVI ▶	HD	TVI
VIDEO STANDARD	◀ 5MP20 ▶	VIDEO STANDARD	5MP12.5\5MP20\4MP15\4MP25\4MP30\1080P25\1080P30
REBOOT&APPLY		REBOOT&APPLY	
RETURN		RETURN	


HD	◀ CVI ▶	HD	CVI
VIDEO STANDARD	◀ 4MP25 ▶	VIDEO STANDARD	4MP25\4MP30\1080P25\1080P30
REBOOT&APPLY		REBOOT&APPLY	
RETURN		RETURN	

HD	◀ CVBS ▶	HD	CVBS
VIDEO STANDARD	◀ PAL ▶	VIDEO STANDARD	PAL\NTSC
REBOOT&APPLY		REBOOT&APPLY	
RETURN		RETURN	

● Packing

1. Camera	X1
2. User Manual	X1
3. Screw	X2
4. Plastic-Conical-Anchor	X2
5. Power Connector Cable	X1

● Use the OSD joystick to switch the camera to:

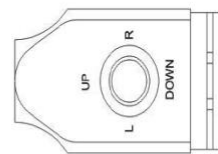

OSD Cable

1. "L" for left direction
2. "R" for right direction
3. "UP" for upwards direction
4. "DOWN" for downwards direction
5. Press the button for OSD menu

● video signal output switches

