



ioSmart Gen 2 Card Reader Installation Guide

Table of contents

1. [Safety instructions](#)
2. [System overview](#)
 1. [Unpacking the ioSmart card reader](#)
3. [ioSmart mobile smart keys](#)
 1. [Changing the ioSmart card reader from standard to panel-less mode](#)
 2. [Changing the ioSmart card reader from panel-less to standard mode](#)
4. [Upgrading the ioSmart card reader](#)
5. [ioSmart card reader models](#)
 1. [Mullion ioSmart card reader](#)
 2. [Single Gang ioSmart card reader](#)
6. [Technical features](#)
 1. [Wiegand mode](#)
 2. [OSDP support](#)
 3. [RS-485 mode](#)
 4. [BLE mode](#)
 5. [RFID technologies](#)
 6. [Capacitive touch keypad](#)
 7. [Auto-detection](#)
 8. [LED status bar](#)
 9. [Optical tamper](#)
7. [Technical specifications](#)
8. [Mounting](#)
 1. [Mounting the ioSmart card reader](#)
9. [Wiring](#)
 1. [Wiring distance](#)
 2. [Six pole screwless terminal block](#)
 1. [RS-485 mode](#)
 2. [Wiegand mode](#)
 3. [RS-485 wiring](#)

4. [RS-485 CAT5 wiring](#)
5. [RS-485 lock output wiring](#)
6. [BLE lock output wiring for panel-less mode](#)
7. [Wiegand wiring](#)
8. [Wiegand CAT5 wiring](#)
9. [Connecting multiple readers to a controller](#)
 1. [Daisy chain wiring](#)
 2. [Star wiring](#)
10. [Configuring the reader](#)
 1. [Configuring the reader using the terminals](#)
 1. [Factory default \(SSF transmission format\)](#)
 2. [Hard reset \(SSF transmission format\)](#)
 3. [34-bit transmission format](#)
 4. [26-bit transmission format](#)
 5. [Sending the unique identifier \(UID\)](#)
 2. [Configuring the reader using a Kantech smartcard](#)
 3. [Configuring the reader's OSDP address](#)
11. [Technical support](#)
12. [End-User License Agreement](#)
13. [Copyright information](#)
14. [Compliance specifications](#)
 1. [FCC](#)
 2. [CE compliance](#)
 3. [UL Standards compliance](#)
 4. [NIST \(National Institute of Standards and Technology\)](#)
 5. [RoHS \(Restriction on Hazardous Substances\)](#)
 6. [WEEE \(Waste Electrical and Electronic Equipment\)](#)

Safety instructions

This equipment, RS-485 ioSmart Card Reader, shall be installed and used within an environment that provides the pollution degree max 2 and overvoltages category II, in NON HAZARDOUS LOCATIONS only. The equipment is FIXED and is powered from a Limited Power Source from the controller to which it is connected; it is designed to be installed by Service Persons only; [Service Person is defined as a person having the appropriate technical training and experience necessary to be aware of hazards to which that person may be exposed in performing a task and of measures to minimize the risks to that person or other persons].


System overview

Kantech ioSmart card readers in RS-485 mode provide end-to-end encryption when they are used with other products such as Kantech controllers and EntraPass access control management software.

The ioSmart card readers in RS-485 mode use AES 128-bit (U.S. NIST encryption specification) between the following:

- The ioSmart card reader and the ID badge credentials.
- The ioSmart card reader and the Kantech controller.
- The Kantech controller and the EntraPass software. An IP or RS-485 connection is required.

Figure 1. ioSmart card reader encryption overview

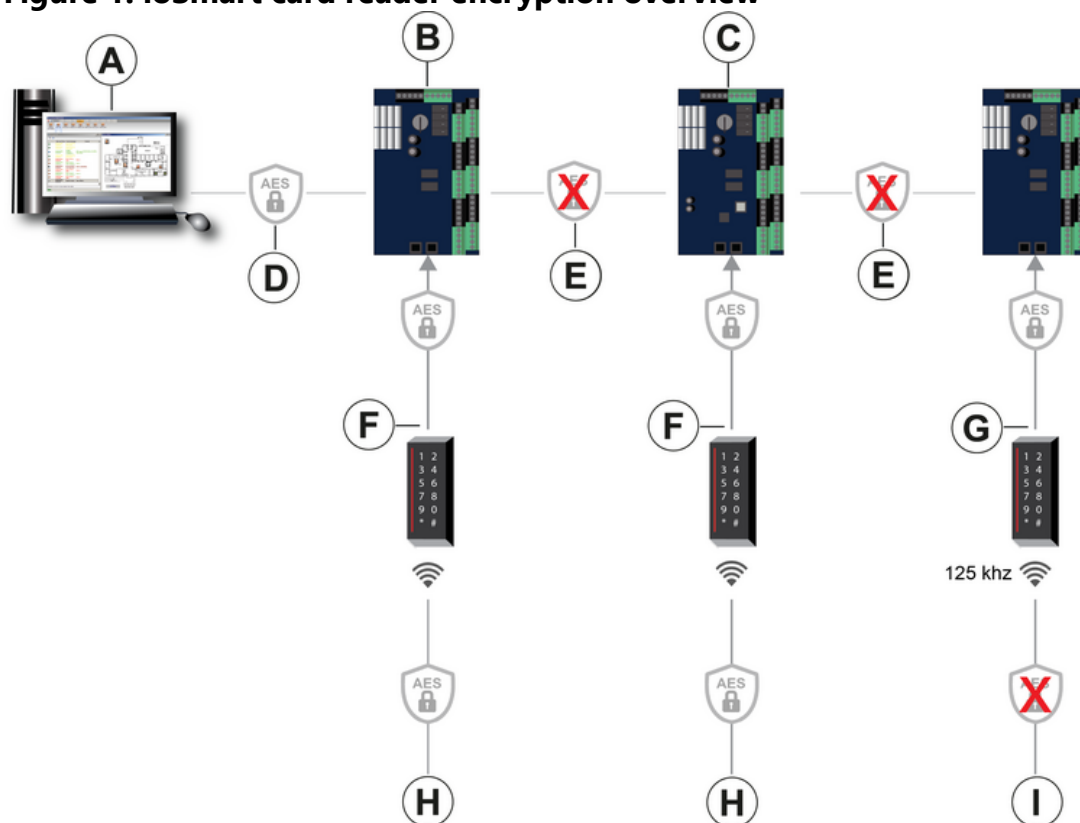

Callout	Description
A	EntraPass
B	Master
C	Subordinate
D	IP (AES 128-bit encrypted)
E	Standard RS-485
F	RS-485 (AES 128-bit encrypted)
G	RS-485 Kantech ioSmart (AES 128-bit encrypted)
H	MIFARE PLUS EV1 (AES 128-bit encrypted)
I	HID Prox, ioProx, HID Iclass CSN

The ioSmart card readers support the transmission of card numbers using Wiegand protocol.

The ioSmart card readers support the following formats:

- Standard 34-bit format
- Standard 26-bit format
- Most common HID formats
- Other Kantech proprietary formats including eXtended Secure Format (XSF) and Smartcard Secure Format (SSF)

You can install ioSmart card readers inside or outside. For PIN entry and other functions, some models integrate a backlit, capacitive touch keypad. For security purposes, you must install panel-less (no controller) readers on the secure side of the door.

To upgrade efficiently, some models support both ioSmart card technology and Kantech ioProx proximity technology.

Note: For information about the available models and the supported credentials for each model, see Technical specifications.

Unpacking the ioSmart card reader

Before you install the reader, check that the product box contains the following items:

- One ioSmart card reader
- Two 11.1K Ω resistors
- Four 5.6K Ω resistors
- One Phillips head screw, #6-32
- One *ioSmart Gen 2 Card Reader Quick Start Guide*

ioSmart mobile smart keys

Using the ioSmart card reader Bluetooth low energy (BLE) mobile technology, smart keys provide panel-less, managed access to offline doors, or other powered, lock-controlled openings. Administrators can create, edit, issue, and revoke smart keys for personnel, remotely and on demand, without access to physical cards.


In panel-less mode, ioSmart card readers do not require any local network connectivity and provide cloud-managed access control for mobile users even when the mobile device hosting the EntraPass mobile application is disconnected from the Internet. CloudVue services manage the smart keys and deliver them to the EntraPass go Pass mobile application.

WARNING

Controlled door locks may be governed by regulatory bodies and must always be installed according to local regulations. In most instances, there are strict limitations

to installing fail-secure devices and fail-safe locking devices such as magnetic locks or other similar locking devices on doors that are used as emergency exits.

Figure 1. ioSmart mobile smart keys

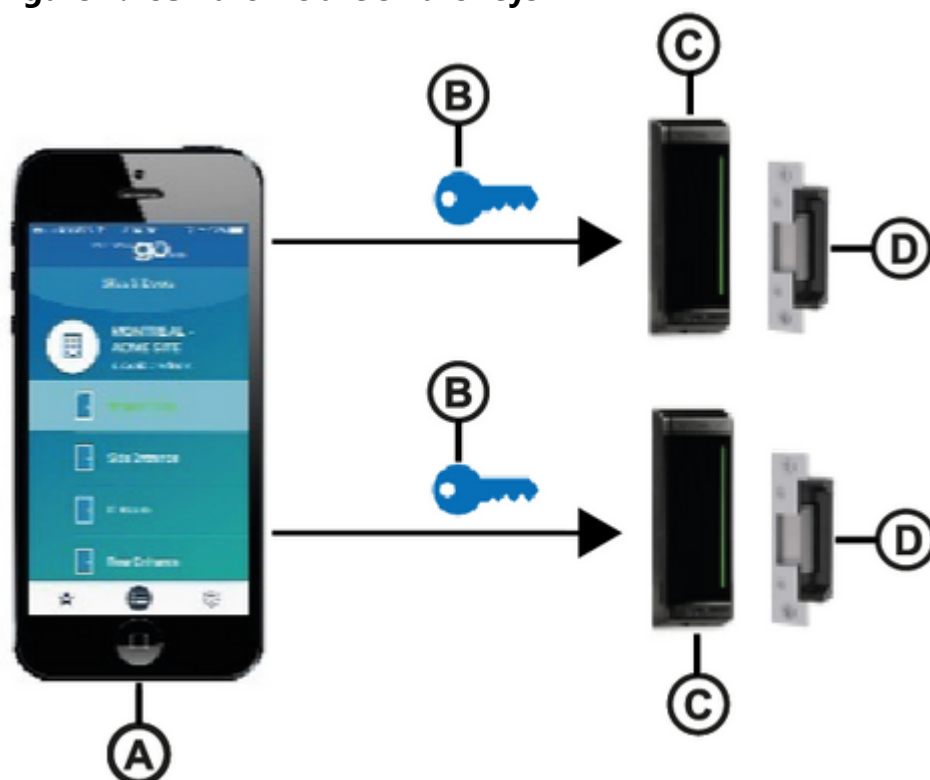

Callout	Description
A	Smartphone with the EntraPass go Pass application
B	Smart key
C	ioSmart card reader
D	Door strike

Changing the ioSmart card reader from standard to panel-less mode

To change the ioSmart card reader from standard mode to panel-less mode, complete the following steps:

1. If the reader is connected to a controller and authenticated, you must set the reader to factory default before you can configure it as a panel-less reader. To set the reader to factory default, see [Factory default \(SSF transmission format\)](#).
2. To define the reader as panel-less, log on to CloudVue:
<https://cloudvue.com/login>.
 - a. On the Live page, on the Access tab, find the reader and click the Edit icon.
 - b. On the Settings page, in the General pane, from the Function Mode list, select Panelless (Mobile Smart Key Door).

3. From the EntraPass go Pass application, send three valid unlock requests in panel-less mode.

When an ioSmart card reader is in panel-less mode, it does not generate Wiegand code and it cannot be connected over RS-485 to a controller.

Changing the ioSmart card reader from panel-less to standard mode

To change the ioSmart card reader from panel-less mode to standard mode, set the reader to factory default or perform a hard reset on the reader.

Important: Forcing the reader to factory default deletes all custom settings from the reader, and you may need to contact technical support to reset it. To avoid setting a panel-less reader to factory default, perform a hard reset. To perform a hard reset, see [Hard reset \(SSF transmission format\)](#).

Upgrading the ioSmart card reader

The ioSmart card readers are field upgradable with future firmware releases and can be upgraded using RS-485 communication with a KT-1 or KT-400 controller through EntraPass or through the KT-Standalone connection.

If you use a Kantech controller with EntraPass, perform upgrades on the **Operation** tab.

If you use the KT-Standalone connection, perform upgrades under Admin > Firmware > Update ioSmart.

Note: You cannot perform field upgrades in panel-less mode.

ioSmart card reader models

There are two ioSmart card reader sizes, the Mullion and the Single Gang. The Mullion has four models and the Single Gang has four models.

Mullion ioSmart card reader

The following table lists the Mullion ioSmart card reader models.

Table 1. Mullion ioSmart card reader models

Model	Type	RFID
KT-MUL-SC2	Smart card only Mullion	13.56 MHz
KT-MUL-MT2	Multi-technology Mullion	13.56 MHz + 125 kHz

Model	Type	RFID
KT-MUL-MT-KP2	Multi-technology Mullion with a keypad	13.56 MHz + 125 kHz
KT-MUL-SC-KP2	Mullion with a keypad, smart card only	13.56 MHz

The following figure shows the dimensions of the Mullion ioSmart card reader.

Figure 1. Mullion ioSmart card reader dimensions

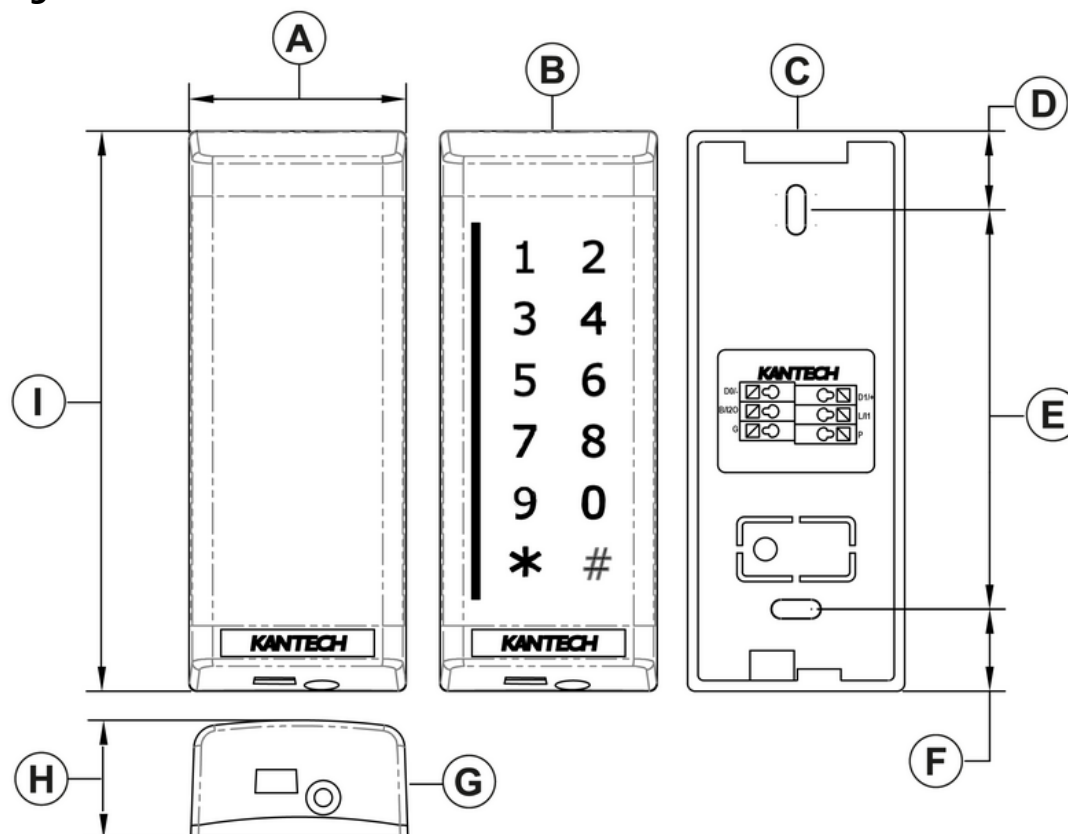


Table 2. Mullion ioSmart card reader dimensions

Callout	Description
A	1.770 in. (44.96 mm)
B	Reader with a keypad
C	Rear view of the reader
D	0.643 in. (16.32 mm)
E	3.254 in. (82.65 mm)
F	0.669 in. (16.99 mm)
G	Elevation
H	0.964 in. (24.48 mm)
I	4.565 in. (115.95 mm)

Single Gang ioSmart card reader

The following table lists the Single Gang ioSmart card reader models.

Table 1. Single Gang card reader models

Model	Type	RFID
KT-SG-SC2	Smart card only Single Gang	13.56 MHz
KT-SG-MT2	Multi-technology Single Gang	13.56 MHz + 125 kHz
KT-SG-MT-KP2	Multi-technology Single Gang with a keypad	13.56 MHz + 125 kHz
KT-SG-SC-KP2	Multi-technology Single Gang with a keypad, smart card only	13.56MHz

The following figure shows the dimensions of the Single Gang ioSmart card reader.

Figure 1. Single Gang ioSmart card reader dimensions

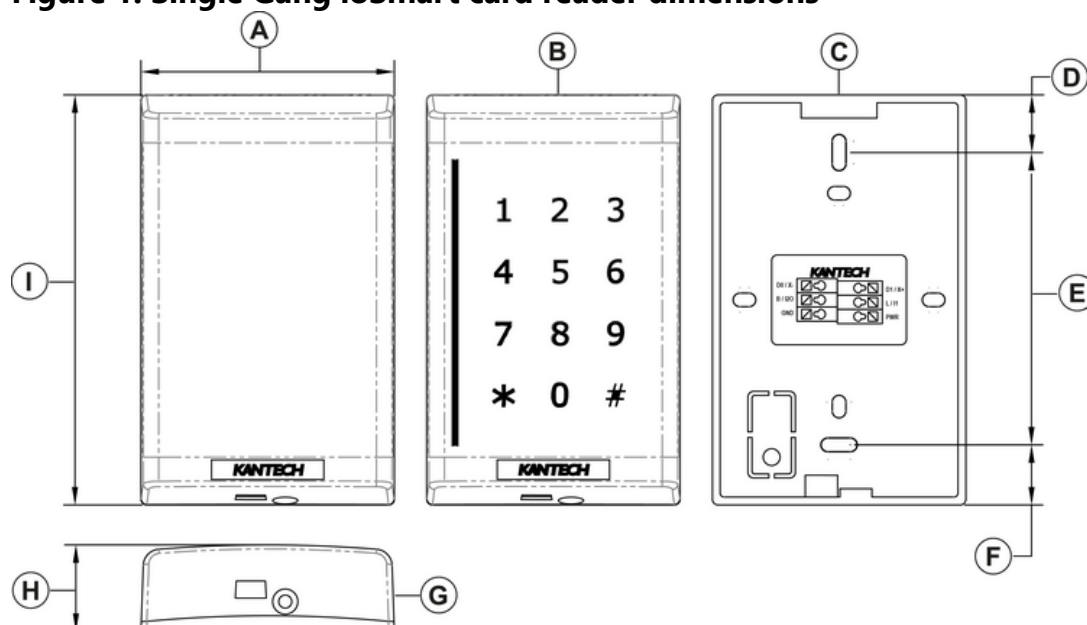


Table 2. Single Gang ioSmart card reader dimensions

Callout	Description
A	2.820 in. (71.63 mm)
B	Reader with a keypad
C	Rear view of the reader
D	0.643 in. (16.32 mm)
E	3.254 in. (82.65 mm)
F	0.669 in. (16.99 mm)
G	Elevation

Callout	Description
H	0.964 in. (24.48 mm)
I	4.565 in. (115.95 mm)

Technical features

Use this section to find out about the technical features of the ioSmart card reader.

Wiegand mode

The ioSmart card reader is compatible with all Kantech controllers through the Wiegand communication interface and with all third party access controllers supporting Kantech SSF, Kantech XSF, HID Prox, Wiegand 26-bit, or Wiegand 34-bit standard.

OSDP support

The ioSmart card reader supports Open Supervised Device Protocol (OSDP) v2.2, including the following features:

- Firmware download supported by the C-Cure host system
- OSDP address setting
- OSDP communication through RS-485
- Native OSDP compatibility with the Kantech KT-400 and Software House iStar Ultra controllers
- Auto-detection: the ioSmart reader communicates in Wiegand automatically, but it detects communication attempts by the controller in Wiegand, Kantech ioSmart, or OSDP, and automatically switches formats.

RS-485 mode

The RS-485 mode supports KT-400, KT-1, and KT-2 access controllers.

BLE mode

In BLE mode, you can configure the ioSmart card reader in the following two ways:

- **Panel mode:** connected to a controller Wiegand or RS-485. The ioSmart card reader supports standard reading using cards and keypads, and accepts BLE access requests from the EntraPass go Pass application.
- **Panel-less mode:** no controller required. The ioSmart card reader supports only BLE access requests from the Cloudivue Access application and acts as a

lock controller with a supervised lock output and two optional door inputs. For more information, see [BLE lock output wiring for panel-less mode](#).

RFID technologies

Wire loop antennas are used to generate the radio frequency identification (RFID) signals and are compatible with ioSmart, ioProx, HID proximity cards, and HID iClass CSN.

Capacitive touch keypad

On the reader keypad, the 12 capacitive touch keys are backlit with light-emitting diodes (LEDs). By default, the backlighting illuminates in the following situations:

- When you tap the keypad. The first tap is not considered an entry.
- When you swipe a card.

After the backlighting illuminates, you can enter digits.

The reader dims and turns off to save energy if there is no interaction for a set amount of time. Configure the no interaction time in EntraPass. The default time is 10 seconds.

Note: Panel-less mode does not support the capacitive touch keypad.

Auto-detection

After installation, you do not have to configure the reader. The reader defaults to Wiegand automatically. If the reader detects RS-485 or OSDP, then it switches format automatically.

Note: Auto-detection does not work in panel-less mode.

LED status bar

The LED status bar indicates various access conditions to the user. The following table lists the default LED colors and the statuses that they indicate.

Table 1. LED status bar

LED color	Status
Red	Locked
Green	Unlocked
Blue	Keypad press
Yellow	Warning: tamper alarm, low power, or locking device issue.

Note: In RS-485 mode, the reader supports up to eight status colors that you can customize in EntraPass.

Optical tamper

For tamper security, a light reflective sensor on the reader detects a reflective part on the mounting plate. Tamper detection initiates if the reader separates from the mounting plate by more than 5 mm. To mount directly to a wall, use a detachable bracket. In this position, tamper detection initiates if the whole assembly separates from the wall.

The security-enhancing optical tamper is available in RS-485 mode and in Wiegand mode. In Wiegand mode, for firmware 1.04 and higher, you must activate the optical tamper feature for the KT-400, KT-1, and KT-2 controllers to support it. To activate the optical tamper feature, see mode 8 in [Table 1](#).

Technical specifications

The following table outlines the technical specifications for the Mullion and the Single Gang ioSmart card readers.

Table 1. Technical specifications

Specification	Mullion				Single Gang			
Model	KT-MUL-MT-KP	KT-MUL-MT	KT-MUL-SC	KT-MUL-SC-KP2	KT-SG-MT-KP	KT-SG-MT	KT-SG-SC	KTPSG-SC-KP2
RF technologies	13.56 MHz, 125 kHz	13.56 MHz, 125 kHz	13.56 MHz	13.56 MHz	13.56 MHz, 125 kHz	13.56 MHz, 125 kHz	13.56 MHz	13.56 MHz
Power consumption (mA) at 12 VDC peak /average	210 mA / 100 mA	190 mA / 100 mA	190 mA / 100 mA	210 mA / 100 mA	210 mA / 100 mA	190 mA / 100 mA	190 mA / 100 mA	210 mA / 100 mA
Weight	110 g (0.24 lb)	110 g (0.24 lb)	105 g (0.23 lb)	110 g (0.24 lb)	175 g (0.4 lb)	170 g (0.37 lb)	165 g (0.36 lb)	175 g (0.4 lb)
Capacitive touch keypad with backlighting	Yes	No	No	Yes	Yes	No	No	Yes

Specification	Mullion			Single Gang		
Read range 125 kHz ioProx ID-1 credentials (cards)	Up to 5.1 cm (2 in.)	-	-	Up to 6.8 cm (2.7 in.)	-	-
Read range 13.56 MHz MIFARE Plus EV1, encrypted sector, ID-1 credentials (cards)	Up to 4.5 cm (1.7 in.)			Up to 5.9 cm (2.3 in.)		
Mounting	Mullion			Single Gang, North America/Europe		
Dimension (H x W x D)	115.8 x 44.6 x 24.7 mm (4.56 x 1.75 x 0.97 in.)			115.8 x 71.5 x 24.7 mm (4.56 x 2.81 x 0.97 in.)		
Supported credentials 125 kHz	Kantech ioProx XSF cards HID Prox cards	-		Kantech ioProx XSF cards HID Prox cards	-	
Supported credentials 13.56 MHz	13.56 MHz: ioSmart SSF. 32-bit/56-bit CSN/UID: iClass, iClass SE, Mifare Plus EV1/2 (ISO-14443A), Mifare Desfire (ISO-14443A), Mifare Desfire EV1/2/3 (ISO-14443A), Mifare Classic (ISO-14443A) and ISO-14443B.					
Supported credentials BLE (Bluetooth low energy) 2.4 GHz	ioSmart mobile credentials and smart keys					
Wiring terminal	6 screwless poles					
Tamper	Optical					

Specification	Mullion	Single Gang
Wiegand communication formats	Kantech SSF/XSF 26/34 bits and HID Prox	
Sounder	Integrated	
Security	AES- 128 bit encryption: Between the ioSmart card, the reader, and the controller (RS-485 or OSDP). AES-256 bit encryption: Between the ioSmart Mobile Credential (BLE) and reader. Not verified by UL.	
Output	RS-485 or BLE panel-less: 1 supervised open-drain, up to 750 mA	
Operating temperature	-40°C to +70°C (-40°F to +158°F)	
Operating humidity	0 to 95% non-condensing. UL verified at 85% Rh.	
LED indicator	Multi-color bar: red, green, yellow, blue. Configurable.	
Inputs in Wiegand	LED and buzzer	
Inputs in RS-485	2 to 4, configurable	
Inputs in BLE panel-less	2 configurable	
Input voltage	8.5 VDC to 16 VDC (provided by UL 2610, UL 294, or UL 603 listed, power limited power source)	
Housing	Polycarbonate, smoked black	
Flammability rating	UL94 V-2	
Firmware	Fully upgradable using Kantech RS-485	
Ingress protection rating	IP66, not verified by UL	
Communication	RS-485, Wiegand, OSDP , or BLE	
Cabling	3 twisted pairs AWG 22 unshielded or CAT5, up to 150 m (500 ft).	
Warranty	Limited lifetime	

Specification	Mullion	Single Gang
Certifications	FCC, IC, CE, UKCA, UL 294, UL 2610, FIPS 197, RoHS, WEEE. For RS-485, NIST CAVP validation number AES 3667, key length 128.	

Mounting

Use this section to find out how to mount the ioSmart card reader in an appropriate location and how to set up the tamper detection.

There are two levels of tamper detection: the first is if an intruder pulls the front cover from the back panel, and the second is if an intruder pulls the entire panel from the wall.

Note: To guarantee the correct setup, a trained installation technician must install the reader and follow the instructions in this guide.

Mounting the ioSmart card reader

About this task


Mount the Single Gang reader on a wall or on an electrical box. Mount the Mullion reader on a doorframe.

To mount the reader, complete the following steps:

1. Pull the controller's wires from the wall and put them through the hole in the mounting plate.
2. Attach the mounting plate to a flat wall using two screws. The screws are not included.

Note: Do not over tighten the screws, especially if mounting on an uneven wall.

Figure 1. Front cover, mounting plate wire, and screw holes

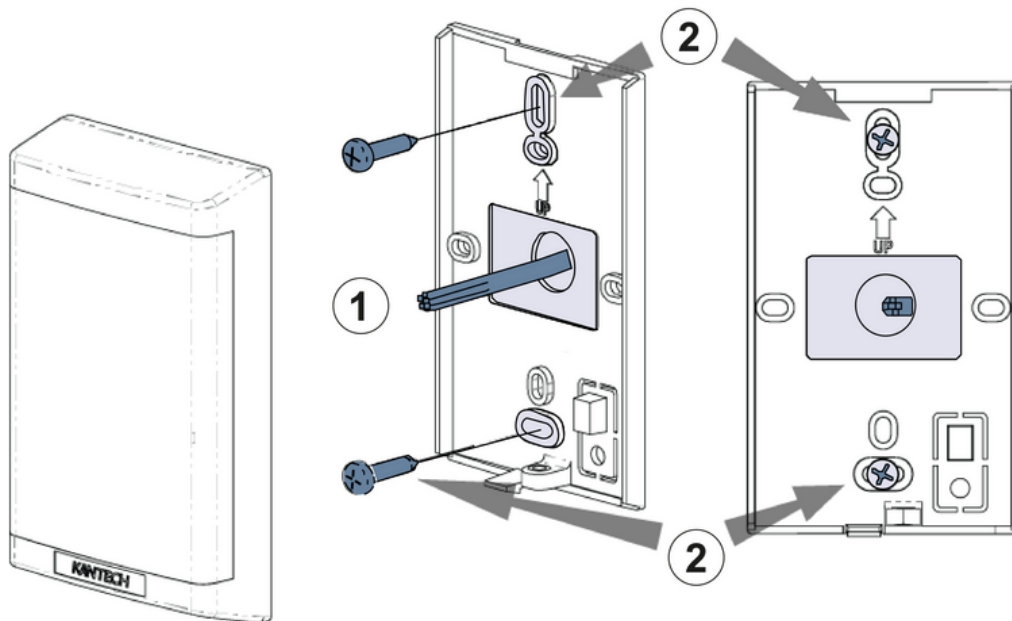

3. For a high level of tamper detection, cut the plastic tamper tab from the mounting plate.
4. Fasten the white reflector tab into the mounting plate hole using a screw. The screw is not included. Use a wall anchor if necessary.

Figure 2. Mounting plate tamper tab and screw hole


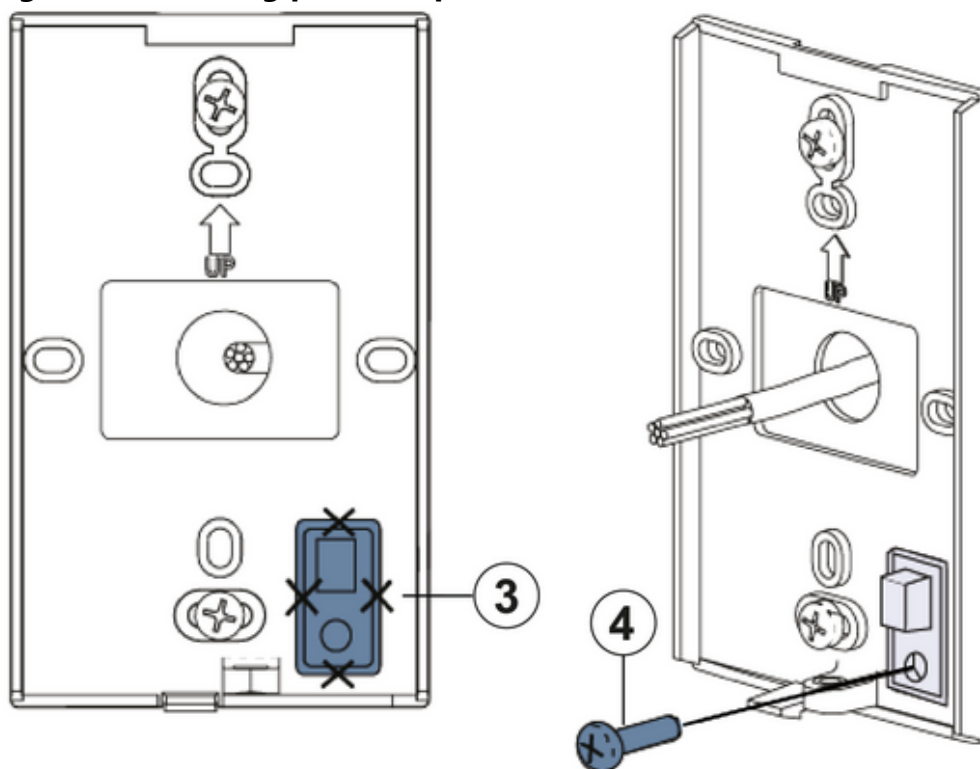


Figure 3. Cover securing hook and screw

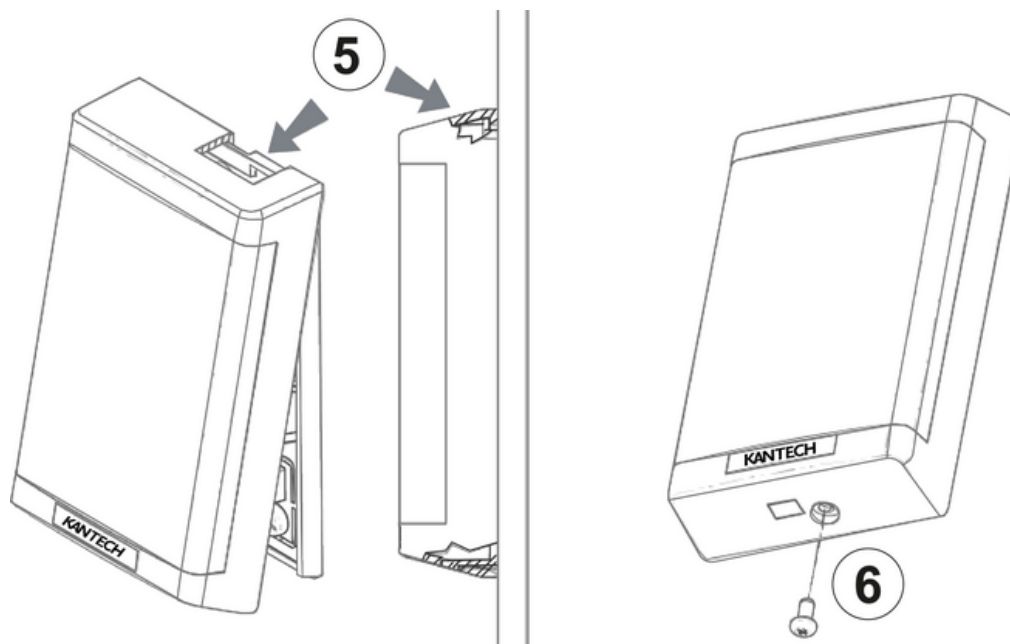

5. After wiring the reader, insert the hook at the top of the cover into the mounting plate tab and press the bottom of the cover until the bottom hook snaps into place.

Note: For instructions about how to wire the reader, see [Wiring](#).

6. Use the provided Phillips head screw, #6-32, to secure the bottom of the reader. The mounting position is successful if you hear a click when you attach the front cover to the mounting plate. If the mounting plate bends, consider positioning the reader in a new location.

Wiring

To connect the reader to the controller, use 3 twisted pairs, 22 AWG (American wire gauge) or CAT5 cable. If you use the CAT5 cable, use two wires for GND and two wires for PWR. The recommended maximum distance between the reader and its power source is 150 m (500 ft).

Wiring distance

The following table outlines the maximum cable distances between the reader and the controller. The results are based on using a KT-400 rev1, a KT-1, or a KT-2. To obtain results for a KT-400 with heat sinks, divide the distance by half.

Table 1. Wiring distance

Protocol	Maximum cable distance at 12 VDC	Wiring per line (1 door)	Equipment per wiring line (1 door)	Example of total equipment (based on KT-400)

Protocol	Maximum cable distance at 12 VDC	Wiring per line (1 door)	Equipment per wiring line (1 door)	Example of total equipment (based on KT-400)
RS-485	152 m (500 ft)	Home run	2 x reader 1 x door contacts 1 x T.REX-xxx	8 x reader 4 x door contacts 4 x T.REX-xxx
RS-485	152 m (500 ft)	Home run	1 x reader with keypad 1 x door contacts 1 x T.REX-xxx	4 x reader with keypad 4 x door contacts 4 x T.REX-xxx
Wiegand	152 m (500 ft)	Weigand, Reverse Wiegand*	2 x reader	8 x reader
Wiegand	76 m (250 ft)	Weigand,	1 x reader	4 x reader

Protocol	Maximum cable distance at 12 VDC	Wiring per line (1 door)	Equipment per wiring line (1 door)	Example of total equipment (based on KT-400)
		Reverse Wiegand*	1 x reader with keypad	4 x reader with keypad

Note: *Reverse Wiegand is available only with ioSmart SSF and ioProx XSF readers and cards on the KT-400 controller.

Figure 1. Example of a home run RS-485 connection

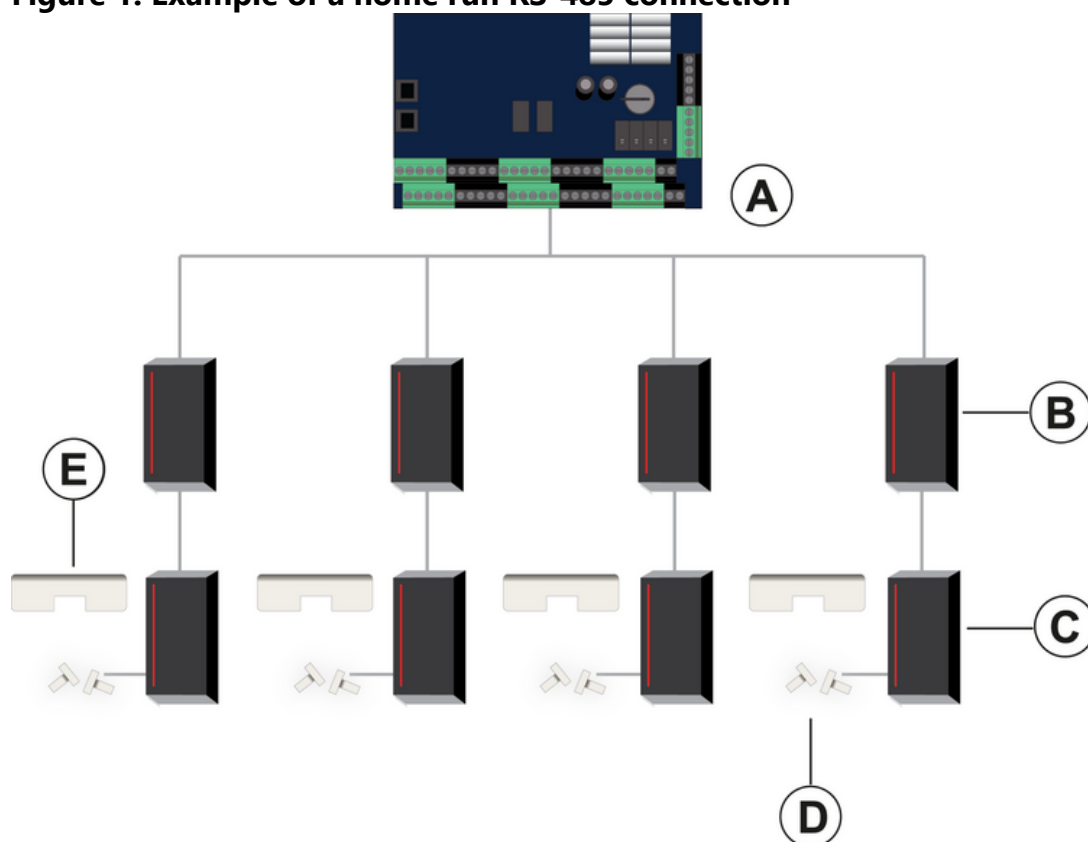



Table 2. Example of a home run RS-485 connection

Callout	Description
A	RS-485 (COM2) 500 ft for each line
B	IN readers
C	OUT readers
D	Door contacts
E	T.REX (request to exit) detectors

Six pole screwless terminal block

The following diagram shows the ioSmart card reader six pole screwless terminal block.

Figure 1. Six pole screwless terminal block

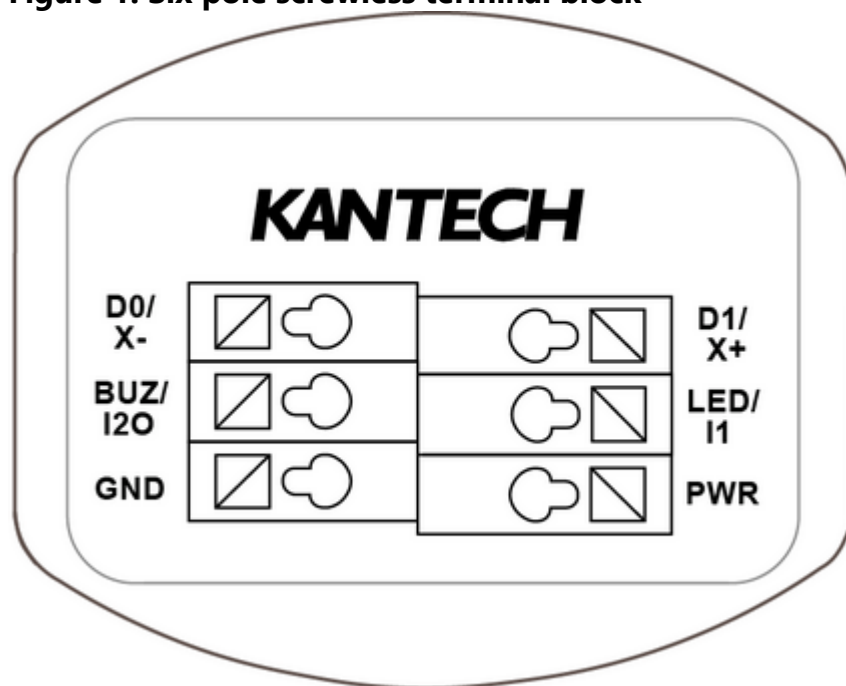

The six pole screwless terminal block consists of the following input and output terminals.

Table 1. Terminal block inputs and outputs

Inputs and outputs	Description
D0 and D1 outputs	Wiegand mode outputs open collector 1K pull-up through 5 VDC with 22 Ω resistor at 50 mA maximum
LED and BUZ input terminals	2.2K pull-ups to +3.3 VDC
GND terminal	Ground
PWR terminal	8.5 VDC to 16 VDC

RS-485 mode

In RS-485 mode, the LED and BUZ inputs are not required so you can configure them for other purposes. For example, configure the BUZ input as an open-collector supervised output and use it as a standard output or as a lock output. You could also use the input as a door contact input or as a request to exit (REX).

Wiegand mode

In Wiegand mode, the Wiegand terminals share the RS-485 port terminals. The BUZ and LED inputs are standard BUZ and LED terminals and not inputs.


The Wiegand mode output formats are as follows:

- Kantech Smartcard Secure Format (SSF) is the default transmission
- Kantech eXtended Secure Format (XSF) transmission
- 34-bit transmission
- 26-bit transmission

RS-485 wiring

The following wiring diagram shows how to connect the reader to the controller in RS-485 (COM2) mode. This is not currently available in EntraPass when using OSDP.

Figure 1. RS-485 wiring diagram

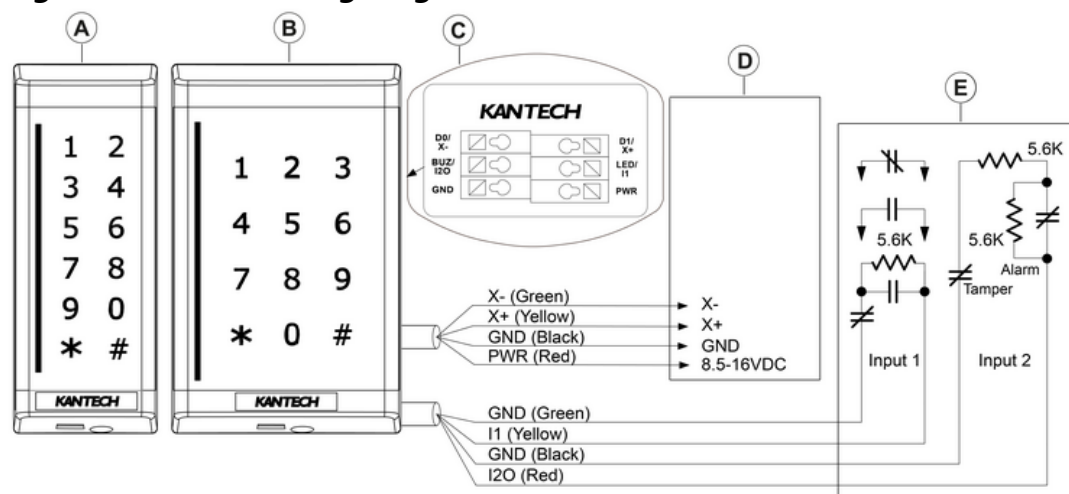

Note: Only use copper conductors, 98.5 ft (30 m) length maximum.


Table 1. RS-485 wiring diagram

Callout	Description
A	Mullion reader
B	Single Gang reader
C	Rear view of the reader
D	Host controller RS-485 (COM2) interface
E	Optional zone inputs 1 and 2. Individually programmable. Zone termination: NC, NO, NEOL, SEOL or DEOL termination.

RS-485 CAT5 wiring

The following wiring diagram shows how to connect the reader to the controller in RS-485 mode using CAT5 cable.

Figure 1. RS-485 wiring diagram using CAT5 cable

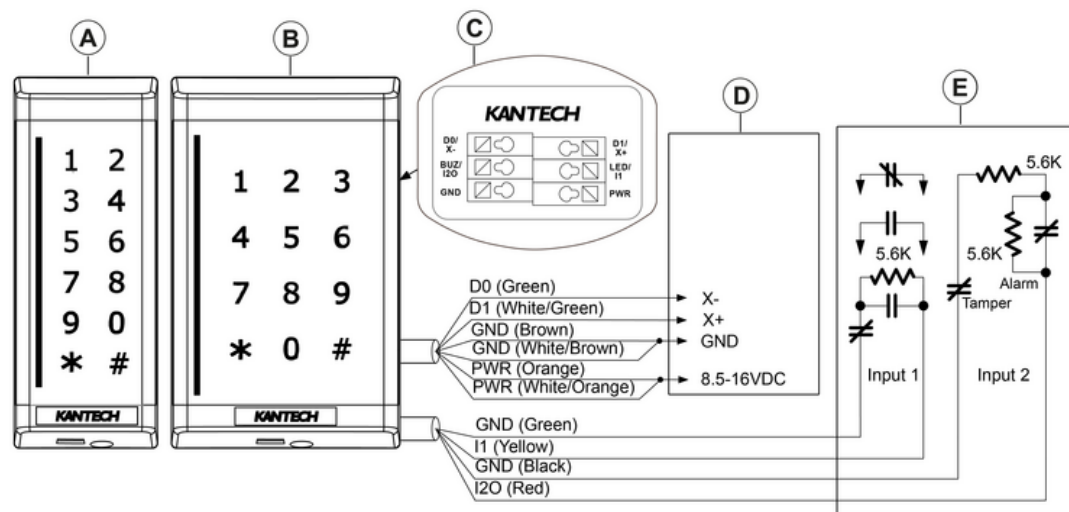

Note: With CAT5 cabling, use 2 wires for GND and 2 wires for PWR.


Table 1. RS-485 wiring diagram using CAT5 cable

Callout	Description
A	Mullion reader
B	Single Gang reader
C	Rear view of the reader
D	Host controller RS-485 (COM2) interface
E	Optional zone inputs 1 and 2. Individually programmable. Zone termination: NC, NO, NEOL, SEOL or DEOL termination.

RS-485 lock output wiring

The following wiring diagram shows how to connect the BUZ input to a lock output in RS-485 mode.

Figure 1. RS-485 lock output wiring diagram

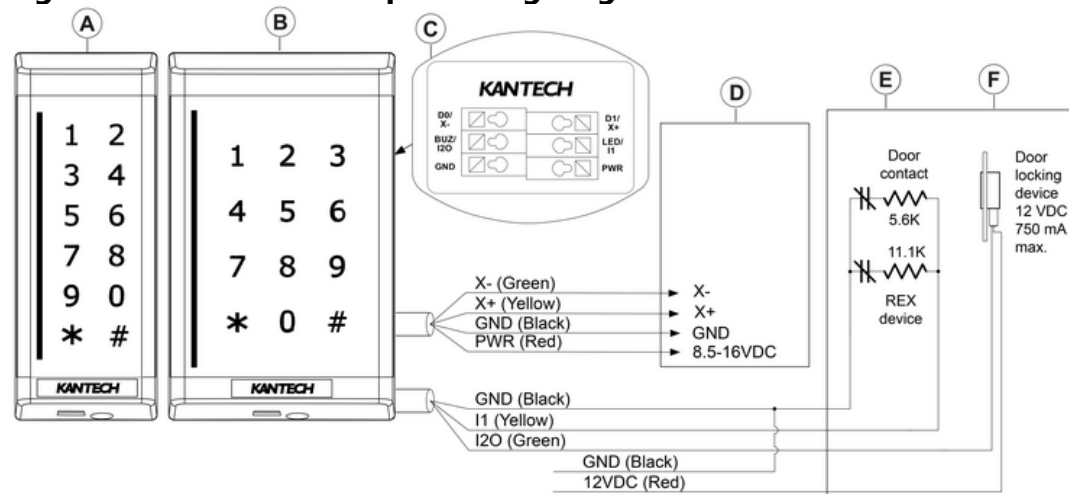

Note: Only use copper conductors.

Note: Use external power supply 12 VDC (750 mA minimum).


Table 1. RS-485 lock output wiring

Callout	Description
A	Mullion reader
B	Single Gang reader
C	Rear view of the reader
D	Host controller RS-485 (COM2) interface
E	Input 1 programmed as dual input configuration
F	Input 2 programmed as output device configuration

BLE lock output wiring for panel-less mode

The following wiring diagram shows how to connect the BUZ input to a lock output in BLE panel-less mode, with optional input contact.

Figure 1. BLE lock output wiring diagram

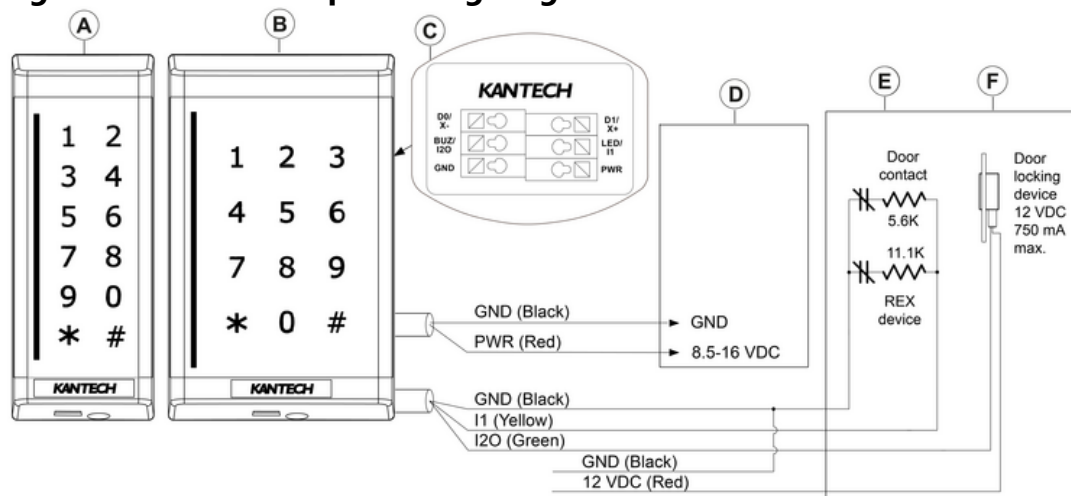

Note: Only use copper conductors.

Note: Use external power supply 12 VDC (750 mA minimum).

Table 1. BLE lock output wiring

Callout	Description
A	Mullion reader
B	Single Gang reader
C	Rear view of the reader
D	External 12 VDC power supply

Callout	Description
E	Input 1 programmed as dual input configuration (door contact and REX)
F	Input 2 programmed as output device configuration

Wiegand wiring

The Wiegand interface uses three wires, one common ground (GND) and two data transmissions (D0 and D1). The following wiring diagram shows how to connect the reader to the controller in Wiegand mode.

Figure 1. Wiegand wiring diagram

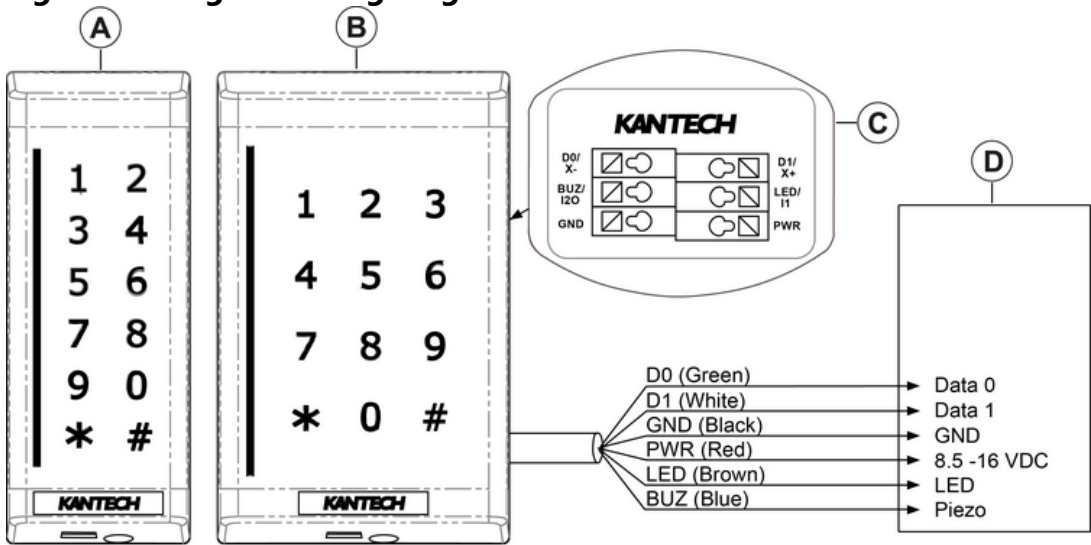



Table 1. Wiegand wiring diagram

Callout	Description
A	Mullion reader
B	Single Gang reader
C	Rear view of the reader
D	Host controller Wiegand interface

Wiegand CAT5 wiring

The following wiring diagram shows how to connect the reader to the controller in Wiegand mode using the CAT5 cable.

Figure 1. Wiegand wiring diagram using CAT5 cable

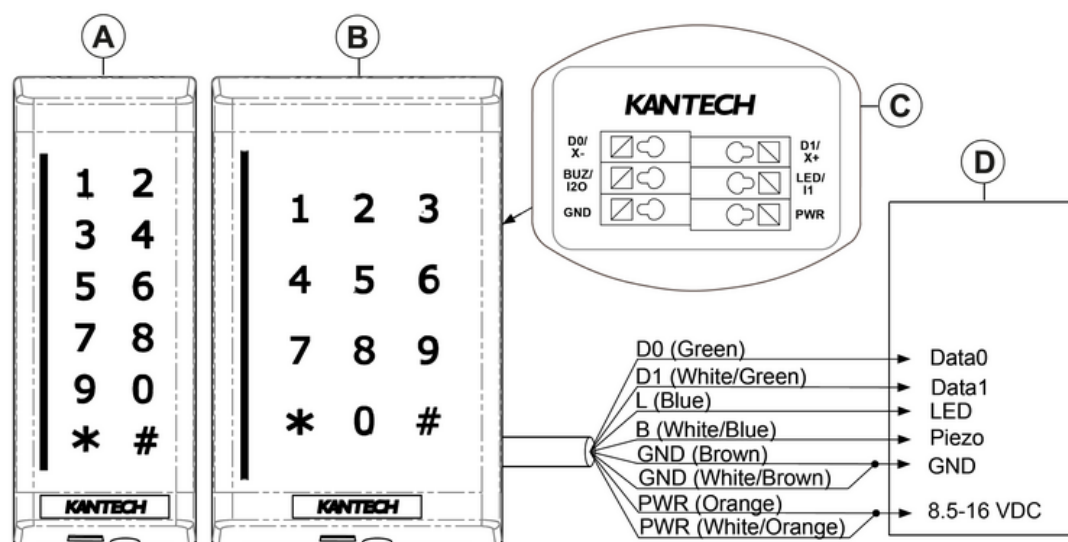

Note: With CAT5 cabling, use 2 wires for GND and 2 wires for PWR.

Table 1. Wiegand wiring diagram using CAT5 cable

Callout	Description
A	Mullion reader
B	Single Gang reader
C	Rear view of the reader
D	Host controller Wiegand interface


Connecting multiple readers to a controller

Use this section to find out how to connect multiple readers to a controller using the daisy chain or the star wiring methods.

Daisy chain wiring

The following diagram shows the daisy chain wiring method to connect multiple readers to a controller.


Figure 1. Daisy chain wiring diagram

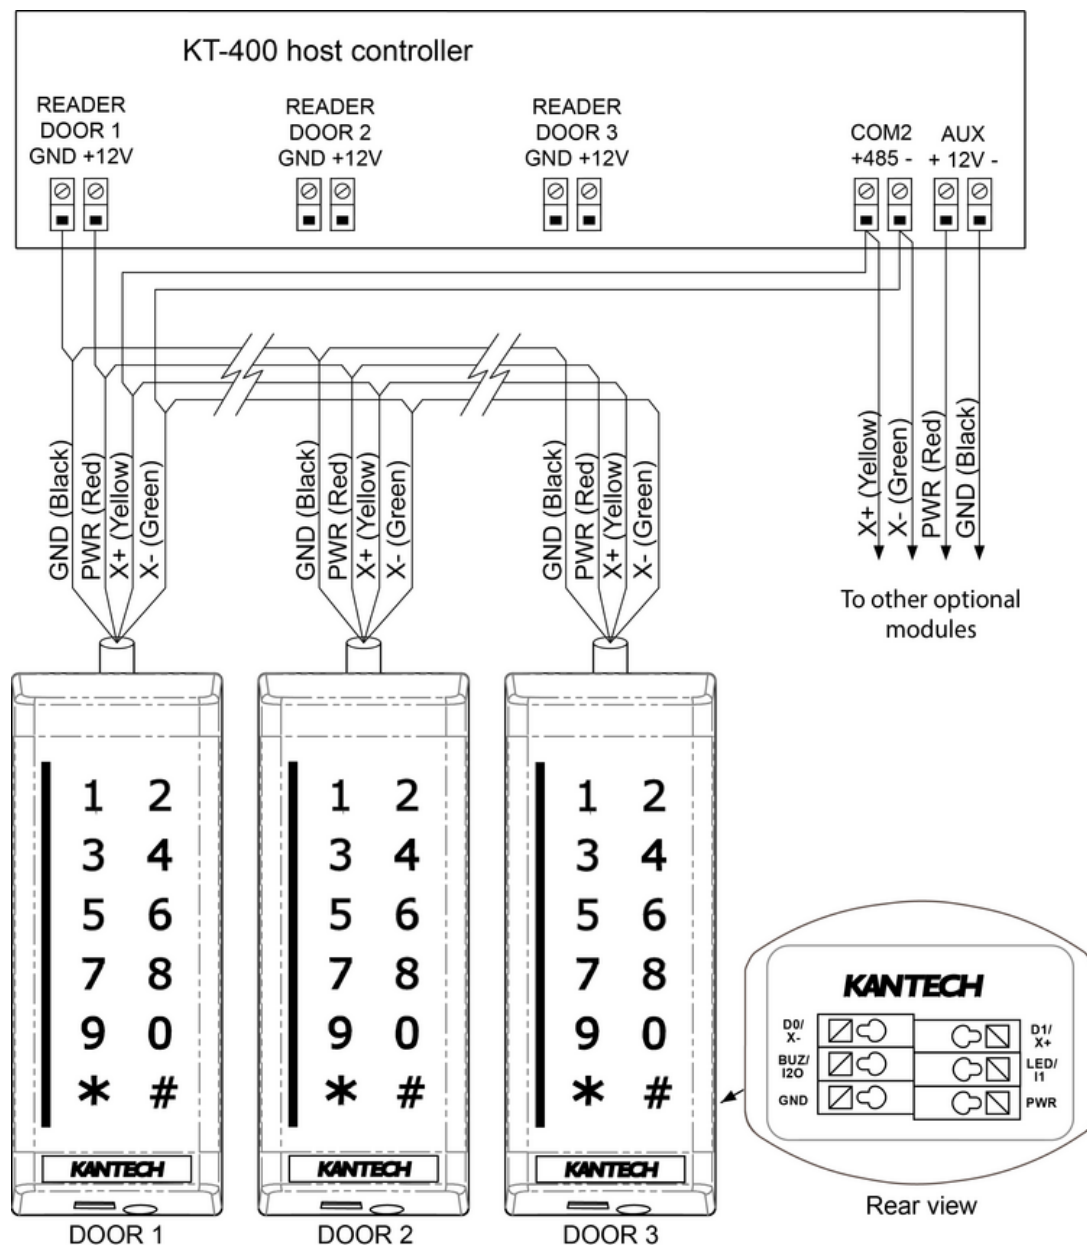

Star wiring

The following diagram shows the star wiring method to connect multiple readers to a controller.

Figure 1. Star wiring diagram

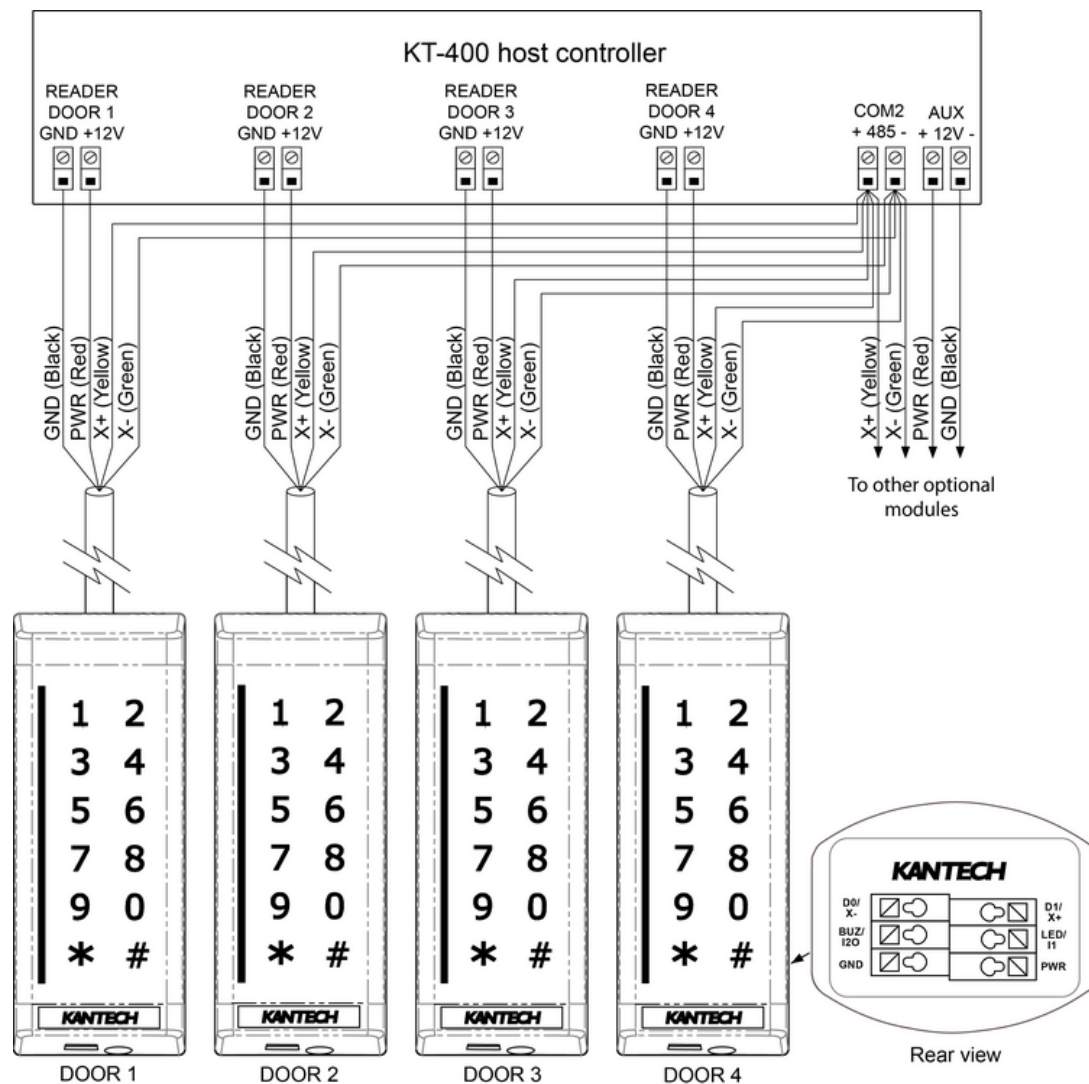

Configuring the reader

Use this section to configure the reader by short circuiting the wires on the terminal or to configure the reader using your Kantech smart card.

Configuring the reader using the terminals


Use this section to configure the reader using the terminals.

Note: If RS-485 communication is not detected when you turn on the reader, it transmits Wiegand format according to its configuration.

Factory default (SSF transmission format)

Procedure

Figure 1. Factory default terminal block shorting diagram

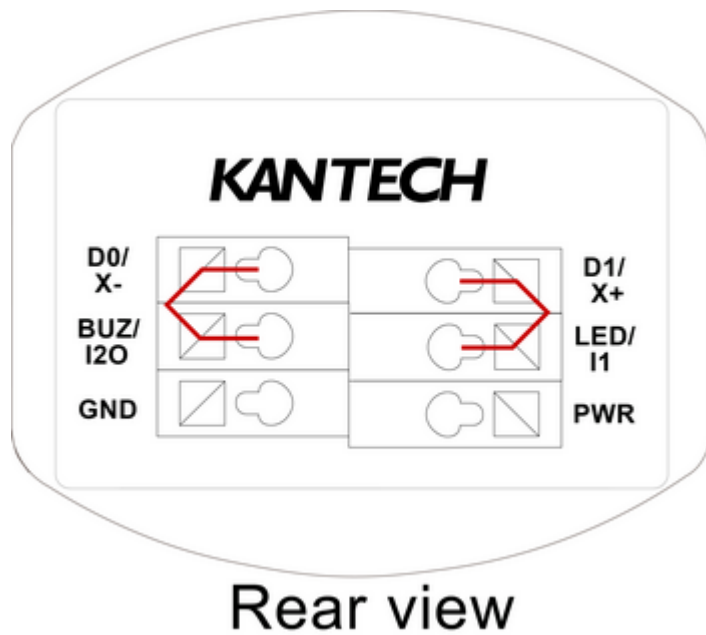

SSF is the factory default configuration.

Important: Forcing the reader to factory default resets the following:

- All custom settings
- BLE credential data
- The OSDP address resets to 0, the OSDP speed resets to 115200 baud

Note: If you factory default a panel-less reader, you may need to contact technical support to reset it. To keep the reader in panel-less mode, perform a hard reset. This option is available in firmware version 1.06.19 and higher.

To return the reader to the factory default configuration, complete the following steps:

1. Short circuit together the D0 and BUZ terminals.
2. Short circuit together the D1 and LED terminals.
3. Apply power to the reader.


A simultaneous sequence of four beeps and flashes, four times, indicates a successful return to the SSF transmission format.

A sequence of rapid beeps and flashes for 4 seconds indicates that the device has not returned to the SSF transmission format.

Hard reset (SSF transmission format)

Procedure

Figure 1. Hard reset terminal block shorting diagram

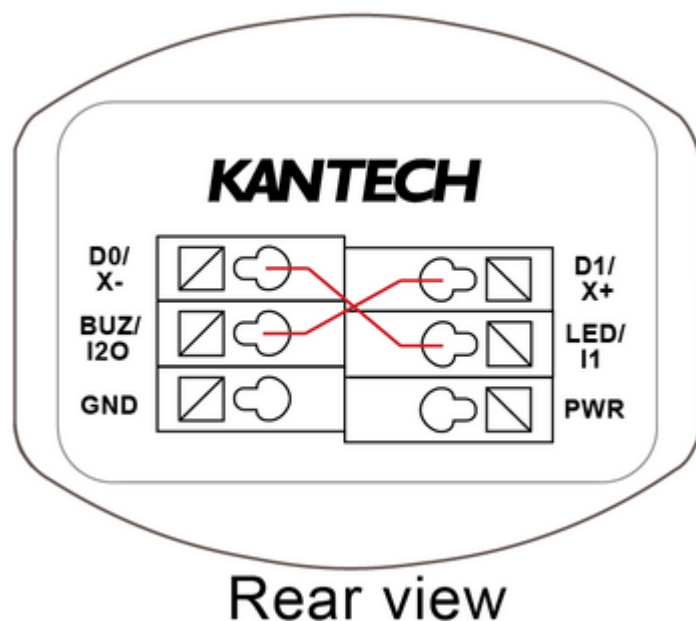

Important: Forcing a hard reset deletes all custom settings from the reader except certain BLE credential data. The OSDP address resets to 0 and the speed resets to 115200 baud. Perform a hard reset instead of a factory default to keep the reader in panel-less mode. This option is available in firmware 1.06.19 and higher.

To return the reader to the default configuration, excluding certain BLE credential data, complete the following steps:

1. Short circuit together the D0 and BUZ terminals.
2. Short circuit together the D1 and BUZ terminals.
3. Apply power to the reader.


A simultaneous sequence of six beeps and flashes, four times, indicates a successful return to default configuration data.

A sequence of rapid beeps and flashes for 4 seconds indicates that the device has not returned to default configuration data.

34-bit transmission format

Procedure

Figure 1. 34-bit terminal block shorting diagram

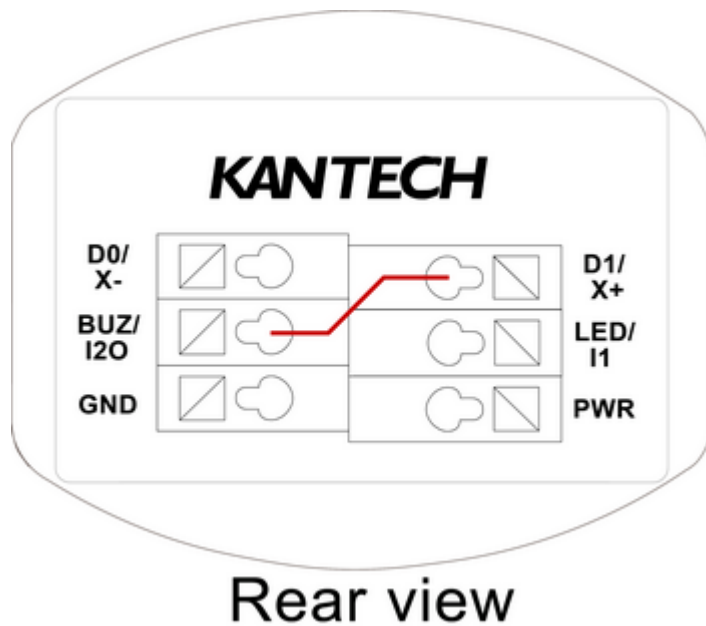


To configure Wiegand 34-bit format transmission, complete the following steps:

1. Short circuit together the D1 and BUZ terminals.
2. Apply power to the reader.
 A simultaneous sequence of one beep and one flash, four times, indicates a successful configuration to the 34-bit transmission format.
 A sequence of rapid beeps and flashes for 4 seconds indicates that the device is not configured to the 34-bit transmission format.

26-bit transmission format

Procedure

Figure 1. 26-bit terminal block shorting diagram

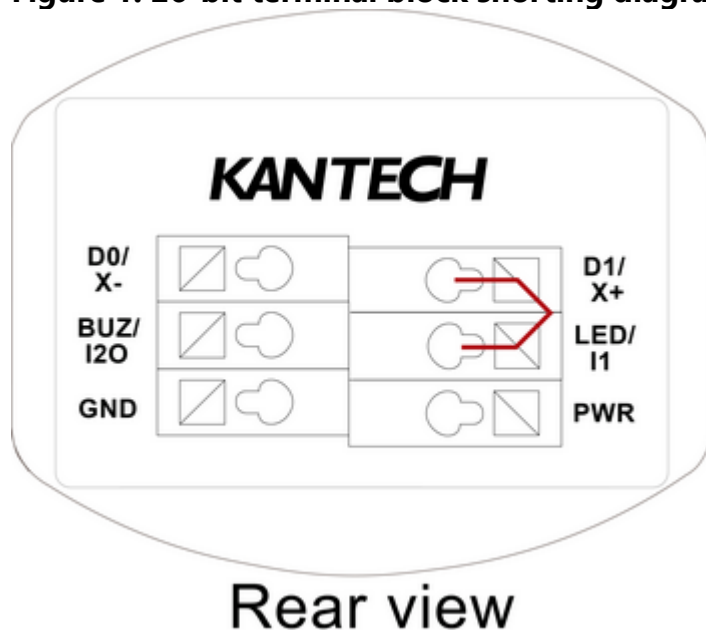


To configure Wiegand 26-bit format transmission, complete the following steps:

1. Short circuit together the D1 and LED terminals.
2. Apply power to the reader.
 A simultaneous sequence of two beeps and flashes, four times, indicates a successful configuration to the 26-bit transmission format.
 A sequence of rapid beeps and flashes for 4 seconds indicates that the device is not configured to the 26-bit transmission format.

Sending the unique identifier (UID)

Procedure

Figure 1. UID terminal block shorting diagram

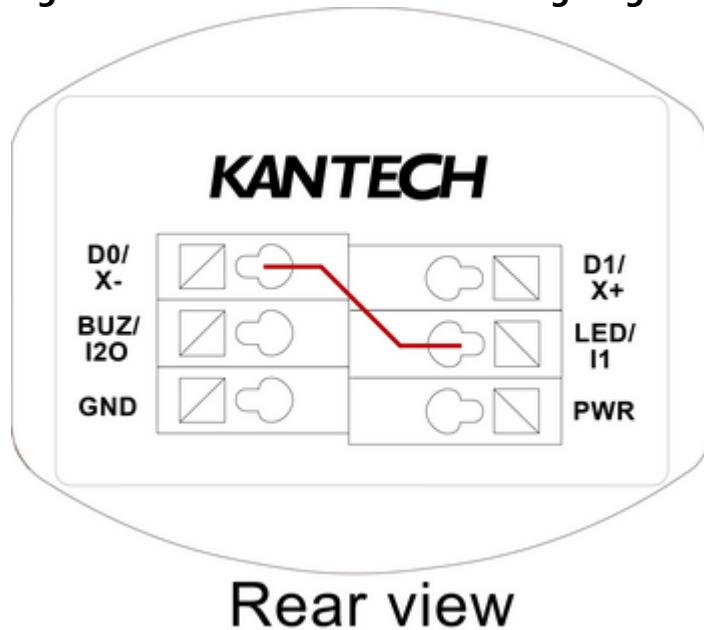

If RS-485 communication is not detected when you turn on the reader, configure the reader to send the UID with supported 13.56 credentials.

To configure the reader to send the UID, complete the following steps:

1. Short circuit together the D0 and LED terminals.
2. Apply power to the reader.
 A simultaneous sequence of five beeps and flashes, four times, indicates a successful configuration to the UID option.
 A sequence of rapid beeps and flashes for 4 seconds indicates that the device is not configured to the UID format.

Configuring the reader using a Kantech smartcard

Procedure

You can configure the reader by using a Kantech smartcard. You can configure up to eight different modes. The following steps describe how to configure the first two

modes. For other modes, follow the same steps but substitute the appropriate values from [Table 1](#).

1. Reset the reader to factory default mode and present the smartcard within the first 10 seconds. Maintain contact for at least 4 seconds. The reader beeps once and the LED flashes once.
2. **Optional:** To configure Wiegand 34-bit format transmission, present the smartcard to the reader once. Five seconds later, the reader beeps once and the LED flashes once to confirm mode 1.
3. **Optional:** To configure Wiegand 26-bit format transmission, present the smartcard to the reader twice. Five seconds after the last smartcard presentation, the reader beeps twice and the LED flashes twice to confirm mode 2.
4. Present the smartcard one final time to confirm the configuration. The reader acknowledges the new configuration with a 1-second continuous beep and LED activation.

Results

The following table lists the amount of times you must present the smartcard to configure each mode.

Table 1. Smartcard configuration modes

Mode	Smartcard presentations	Function
1	Once	34-bit Wiegand transmission
2	Twice	26-bit Wiegand transmission
3	Three times	XSF transmission format
4	Four times	SSF transmission format
5	Five times	Send UID only
6	Six times	14443 Type B enabled
7	Seven times	HID Prox disabled
8*	Eight times	Enable Wiegand mode tamper reporting

Note: *Configuration mode 8 is supported for firmware 1.04 and higher. Wiegand mode tamper reporting is configured by default for firmware 1.03 and lower.

Note: If you select a nonexistent mode, the error mode is triggered; this is a 4-second sequence of beeps and a flashing LED.

After the configuration is confirmed, the reader can accept another configuration within 10 seconds. If you want to use the smartcard to reconfigure the reader, return the reader to factory default mode.

Configuring the reader's OSDP address

About this task

You can configure the reader's OSDP address by using the OSDP Programming Card and OSDP Address Card with the reader. Addresses are identified from numbers 1-10, 20, and 30.

To configure the reader's OSDP address, complete the following steps:

Procedure

1. From Factory default, power on the reader.
2. Within 10 seconds, present the OSDP Programming Card to the reader. Keep the card in contact with the reader for 5 seconds, then the reader beeps.
3. Remove the card. Within 5 seconds, present the relevant OSDP Address Card. The reader beeps the same number of times as on the OSDP Address Card to confirm the setting.
4. When the reader stops the confirmation beeping, it then provides final acknowledgement beeps. The number of acknowledgement beeps match the address number. After the final acknowledgement beeps complete, present any OSDP Programming Card to the reader to set the address in the reader.

Note: If the reader does not receive a final confirmation from an OSDP Programming Card, an error beep occurs and the address remains at factory default 0.

Examples:

To configure the reader to address 7, complete the following steps:

- a. Present the OSDP Programming Card to the reader. Keep the card in contact with the reader for 5 seconds, then the reader beeps.
- b. Present OSDP Address Card 7 to the reader. The reader beeps 7 times.
- c. After several seconds, the reader beeps 7 times as final acknowledgement.
- d. Present any OSDP Programming Card to confirm the address.

To configure the reader to address 27, complete the following steps:

- a. Present the OSDP Programming Card to the reader. Keep the card in contact with the reader for 5 seconds, then the reader beeps.
- b. Present OSDP Address Card 20 to the reader. The reader beeps 20 times.
- c. Immediately present OSDP Address Card 7 to the reader. The reader beeps 7 times.
- d. After several seconds, the reader beeps 27 times as final acknowledgement.

e. Present any OSDP Programming Card to confirm the address.

Technical support

See the following technical support contact details and opening hours in your region, or go to:

https://kantech.com/Support/Contact_Technical_Support_Advanced.aspx.

United States and Canada

Table 1. United States and Canada telephone numbers

Region	Call type	Business hours: 08:00 to 20:00 (EST)
United States and Canada	Toll free	+1 888 222 1560
United States and Canada	Toll free	+1 800 507 6268 option 4

Latin America and Caribbean

For technical support, contact us at one of the following email addresses or use the phone number for your region.

- For access technical support, email access-support@jci.com.
- For video technical support, email video-support@jci.com.
- For technical training inquiries, email latam.certificaciones@jci.com.

Table 2. Latin America and Caribbean telephone numbers

Region	Call type	Business hours: 08:00 to 20:00 (EST)
Latin America and Caribbean	Toll free	+1 800 507 6268
Latin America and Caribbean	Toll free	+1 800 392 2873
Argentina, Buenos Aires	Direct	+54 11 5199 3104
Brazil, Sao Paulo	Direct	+55 11 3181 7377
Chile, Santiago	Direct	+56 2 3210 9662
Colombia, Cali	Direct	+57 2 891 2476
Colombia, Medellin	Direct	+57 4 204 0519
Costa Rica, National VOIP	Direct	+506 4 000 1655
Dominican Republic, Santo Domingo	Direct	+1 829 235 3047

Region	Call type	Business hours: 08:00 to 20:00 (EST)
El Salvador, San Salvador	Direct	+503 2 136 8703
Guatemala, Guatemala City	Direct	+502 2 268 1206
Mexico, Mexico City	Direct	+52 55 8526 1801
Panama, Panama City	Direct	+507 836 6265
Peru, Lima	Direct	+51 1 642 9707
Venezuela, Caracas	Direct	+58 212 720 2340

Europe, Middle East, and Africa

For technical support, contact us at one of the following email addresses or use the phone number for your region.

- For technical post-sales inquiries, email video-support@jci.com.
- For technical training inquiries, email emea.training@jci.com.
- For all licensing inquiries, email sp-licensing-support@jci.com.

Table 3. Europe, Middle East, and Africa telephone numbers

Region	Call type	Business hours: 08:00 to 18:00 (CET)
Europe, Middle East, and Africa	Toll free	+800 2255 8926
Europe, Middle East, and Africa	Direct	+31 475 352 722
Bahrain	Direct	(0)800 04127
Belgium	Direct	+0800 76 452
Denmark	Direct	+45 4494 9001
France	Direct	+0800 90 79 72
Germany	Direct	+0800 1806 757
Greece	Direct	00800 312 294 53
Ireland	Direct	+1800 94 3570
Israel	Direct	+972 772 201 350
Italy	Direct	+39 0230 510 112
KSA	Direct	+96 6800 8500 509
Kuwait	Direct	(0)22062915
Lebanon	Direct	01 426 801, new dial tone and then dial 8552 3436 77

Region	Call type	Business hours: 08:00 to 18:00 (CET)
Nordic Countries	Direct	04494 9001
Oman	Direct	(00) 8007 4364
Qatar	Direct	(00) 800100841
Russia	Direct	81 0800 2052 1031
South Africa	Direct	+27 (0) 10 100 3292
Spain	Direct	+900 99 31 61
Turkey	Direct	+00800 3192 3007
United Arab Emirates	Direct	(0)800 0310 7123
United Kingdom	Direct	+44 330 777 1300

Asia Pacific

For technical support, contact us at one of the following email addresses or use the phone number for your region.

- For video technical support, email video-support@jci.com.
- For technical training inquiries, email apac.training@jci.com.
- For all licensing inquiries, email sp-licensing-support@jci.com.

Table 4. Asia Pacific telephone numbers

Region	Call type	Business hours: 09:00 to 18:00 (CST China Standard Time) and 09:00 to 19:00 (IST India Standard Time)
Asia Pacific	Toll free	+ 800 2255 8926
Australia	Direct	+1 800 580 946
China	Direct	+86 21 6163 8644
India	Direct	+91 80 4199 0994
Oceania and New Zealand	Direct	+64 9942 4004

End-User License Agreement

Software Terms

Use of this software that is in (or constitutes) this product, or access to the cloud, or hosted services applicable to this product, if any, is subject to applicable end-user license, open-source software information, and other terms set forth at

<http://johnsoncontrols.com/techterms>. Your use of this product constitutes an agreement to such terms.

Copyright information

© 2023 Johnson Controls. All rights reserved. JOHNSON CONTROLS and KANTECH are trademarks of Johnson Controls.

Compliance specifications

The ioSmart card reader complies to the following standards approvals.

FCC

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received including interference that may cause undesired operation.

CE compliance

- EN62368-1: Information technology equipment. Safety. General requirements.
- EN55022, Class B: Information technology equipment. Radio disturbance characteristics.
- EN300 330-1: Electromagnetic compatibility and radio spectrum matters (ERM); short range devices (SRD); radio equipment in the frequency range 9 kHz to 25 MHz and inductive loop systems in the frequency range 9 kHz to 30 MHz; part 1: technical characteristics and test methods.
- EN300 330-2: Electromagnetic compatibility and radio spectrum matters (ERM); short range devices (SRD); radio equipment in the frequency range 9 kHz to 25

MHz and inductive loop systems in the frequency range 9 kHz to 30 MHz; part 2: harmonized EN under article 3.2 of the R&TTE directive.

- EN301 489-1: Electromagnetic compatibility and radio spectrum matters (ERM); electromagnetic compatibility (EMC) standard for radio equipment and services; part 1: common technical requirements.
- EN301 489-3: Electromagnetic compatibility and radio spectrum matters (ERM); electromagnetic compatibility (EMC) standard for radio equipment and services; part 3: specific conditions for short-range devices (SRD) operating on frequencies between 9 kHz and 40 GHz.

UL Standards compliance

- UL-294 (UL standard for access control equipment, USA).

Note: Use only a UL 294 or UL 1076 listed power supply.

NIST (National Institute of Standards and Technology)

An approved laboratory has validated the encryption algorithm used in this product. It is compliant with the NIST algorithm validation suite.

RoHS (Restriction on Hazardous Substances)

This standard restricts the use of the following substances: lead, cadmium, mercury, chromium IV, polybrominated biphenyl (PBB), and polybrominated diphenyl ether (PBDE) in electrical and electronic equipment.

WEEE (Waste Electrical and Electronic Equipment)

This regulation is used for waste electrical and electronic equipment, and addresses the disposal and the environmental handling of these products.