

6855

Remote Annunciator Product Installation Document

1 Description

The 6855 Remote Fire Annunciator is a backlit LCD display designed for use with compatible Fire Alarm Control Panels (FACPs). The displays mimic the FACP display and are capable of displaying English language text of system point status including device type, independent point alarm, trouble or supervisory zone and custom alpha labels programmed into the FACP. Refer to the FACP manual installation section for detailed system information and wiring.

2 Compatibility

The 6855 is compatible with the Silent Knight Addressable Control Panels.

3 Specifications


Parameter		Value
Operating Voltage:		24 VDC
Current	Standby:	59 mA
	Alarm:	92 mA
Operating Temperature:		32° - 120°F (0° - 49°C)
Dimensions	Flush mount:	Overall: 12.25"W x 11.5"H x 0.875"D (31.1 x 29.2 x 2.2 cm)
	Surface mount:	Including trim ring: 12.25"W x 11.5"H x 3.0"D (31.1 x 29.2 x 7.6 cm)

4 Installation

The 6855 can be surface or flush-mounted. A trim ring is available for surface mount installations. *Ensure that all power has been disconnected from the fire panel before proceeding with installation.*

4.1 Flush-mounting

1. Cut a hole to accommodate the backbox. The backbox measures 9.375" W x 8.375" H x 2.0" D (23.81cm W x 21.27cm H x 5.08cm D).
2. Remove any knockouts needed for wiring. There are ten available knockout locations.

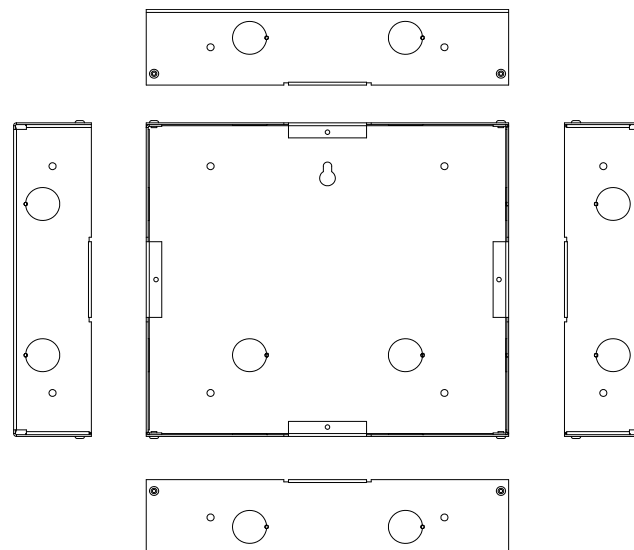

3. Secure the backbox using any of the five (5) holes on the inside of the box and four (4) holes on the sides as shown in the illustration above.

4.2 Surface Mounting

1. Remove desired knockouts from the backbox.



NOTE: Only the two knockouts on the back of the backbox are available when using the optional trim ring.

2. Mark and pre-drill hole in the wall for the center top keyhole mounting bolt.
3. Install center top fastener in the wall with the screw head protruding.
4. Place backbox over the top screw, level, and secure.
5. Mark and drill the left and right upper and lower mounting holes.
6. Install remaining fasteners and tighten.

4.3 Wiring

The following table shows the 6855 connections to the FACP. All connections are supervised and power-limited, Class B.

FACP	6855 (TB1)
SBUS -	Terminal 1 (-)
SBUS +	Terminal 2 (+)
SBUS A	Terminal 3 (A)
SBUS B	Terminal 4 (B)

4.4 Setting the DIP Switches

4.4.1 Address Setting

Each SBUS device requires a unique address. DIP switches 1-6 on S1 are used to set the address. This address will be displayed on the LCD display as the Station ID number.

The maximum number of devices that can be connected to the SBUS communication circuit depends on the limitations of the FACP. Refer to the FACP manual for more information. SBUS device addresses do not need to be sequential and can be set to any number between 01 and 63. Note that 00 is not a valid address.

4.4.2 Communication Protocol

DIP switch 7 is used to determine the communication protocol of the 6855. Set DIP switch 7 to ON for SBUS protocol. This switch must stay in the ON position for proper functionality.



Ensure switch 7 is ON



Incorrect setting

4.4.3 End-of-Line Resistor

The end-of-line termination resistor must be enabled at S1 DIP switch 8 on the last device on the communication circuit. All other annunciators should have these switches set to disable.



termination enabled




termination disabled

4.5 Attach Optional Trim Ring

An optional trim ring, TR-ANN-R, is available for surface mount applications to create a more finished look. Place the trim ring over the backbox, letting it rest on top. When the door assembly is installed, the trim ring will be sandwiched between the door assembly and the wall, securing it into place.

4.6 Annunciator/Door Assembly

Attach the annunciator/door assembly to the backbox using the four (4) supplied screws as shown below.

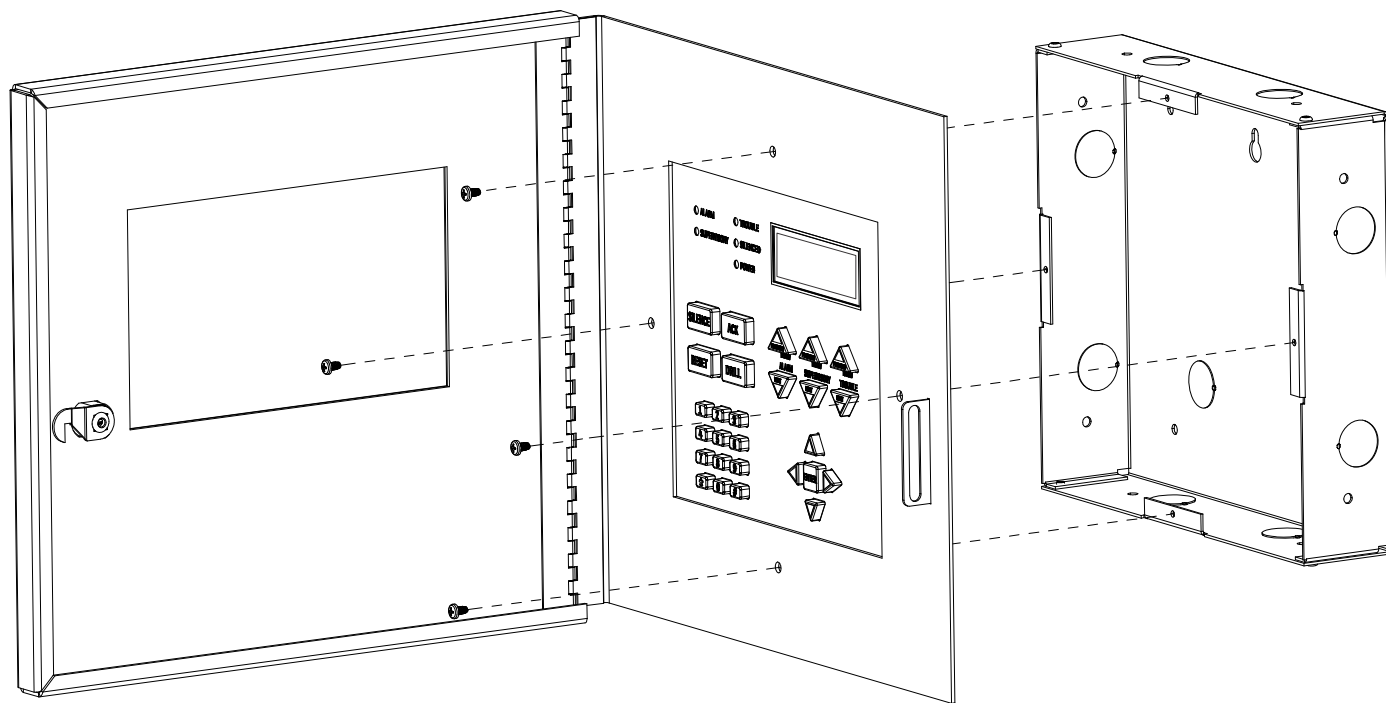

Honeywell Silent Knight

12 Clintonville Road
Northford, CT 06472-1610
203.484.7161
www.silentknight.com

LS10175-001SK-E | C | 06-22
©2022 Honeywell International Inc.

Honeywell